



**How to add third-party IP camera to NVR with
Plug& Play method
Quick Guide**

HIKVISION TECHNICAL SUPPORT TEAM


2016-6-2

How to add third-party IP camera to NVR with Plug& Play method


Hikvision /P series NVR support Plug& Play function, it can access to IP cameras with POE ports. Currently Hikvision NVR's POE ports can access to IP cameras with HIKVISION protocol or ONVIF protocol.

This operation guide will show you steps to add third-party IP cameras.

Go to NVR's local interface- **Camera**, edit IP camera, set the adding mode to Plug& Play.

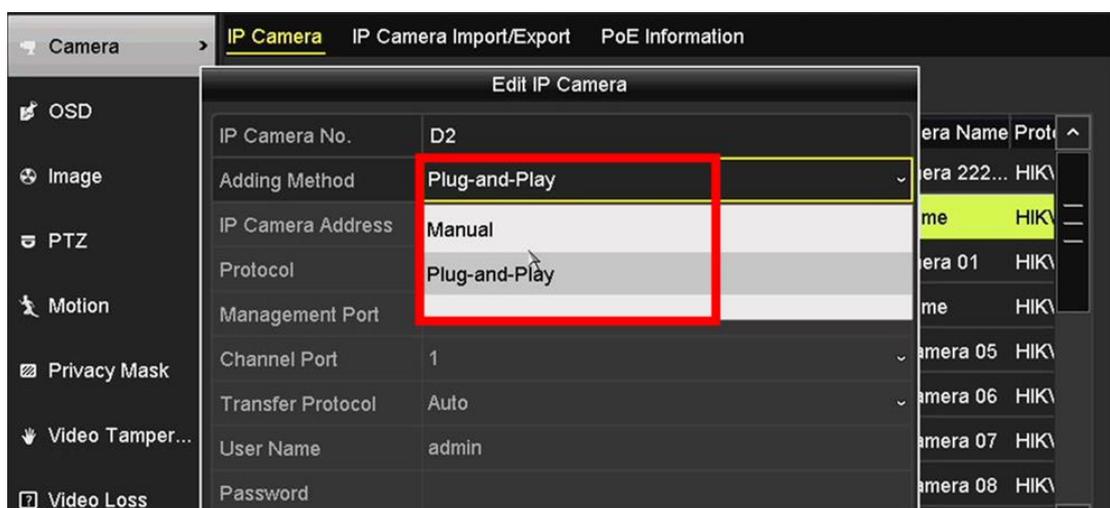

Check the **Internal NIC IPv4 Address** of NVR.

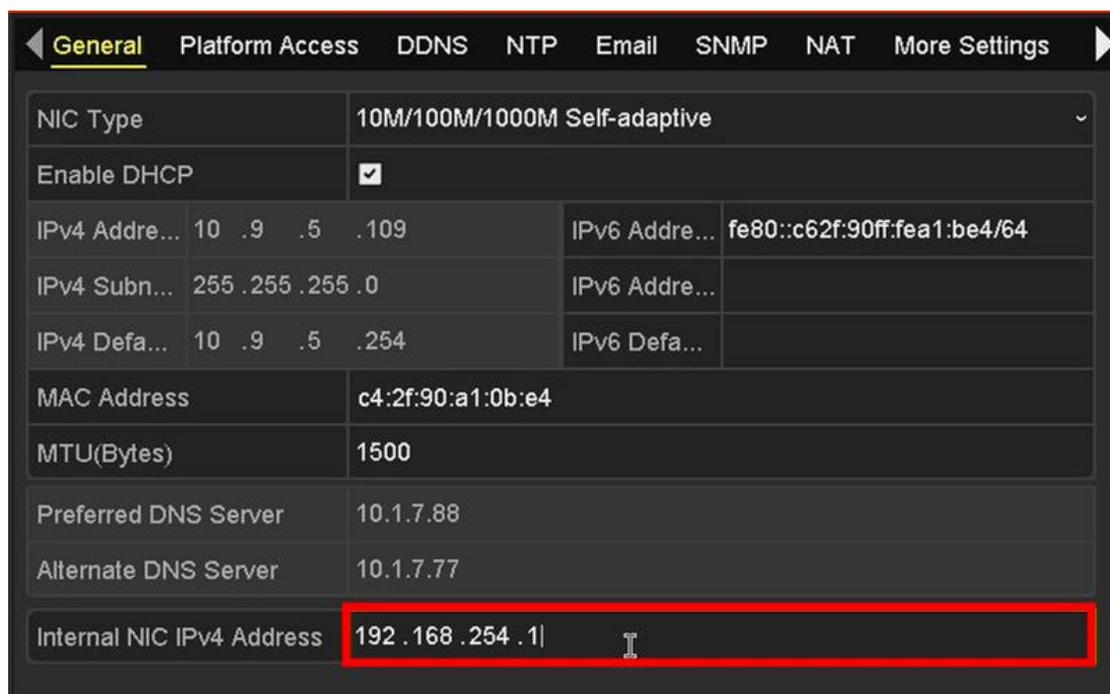

Login in IP camera’s webpage, set the IP address in same network segment with NVR’s Internal NIC IPv4 Address. **Notice that the last number of IP address must be bigger than 100.** Such as 192.168.254.**101**, 10.9.5.**103**.

IP Setting

IP Assignment

DHCP

Static

IP Address:

Subnet Mask:

Gateway:

DNS 0:

DNS 1:

Before connecting IP cameras to NVR’s POE ports, make sure **IP camera’s password is 12345 or same with NVR’s admin password**. Besides, IP camera should meet AF/AT 802.3a standard and support ONVIF protocol.

Connect IP camera to NVR’s POE ports, NVR will automatically access to IP camera.

IP Camera								
Add/De...	Status	Security	IP Camera A...	Edit	Up...	Camera Name	Protocol	De
—		N/A	192.168.254...		—	IPCamera 01	ONVIF	De
—		N/A	192.168.254...		—	IPCamera 02	HIKVISION	



First Choice for Security Professionals Hikvision Technical Support

