



## **How to fix motion detection problems with Vivotek FD8136**


If you're having problems with moving and resizing the motion detection box there is a simple solution to fixing this.

Open the camera in IE (Internet Explorer).




Click configuration.


ork Camera

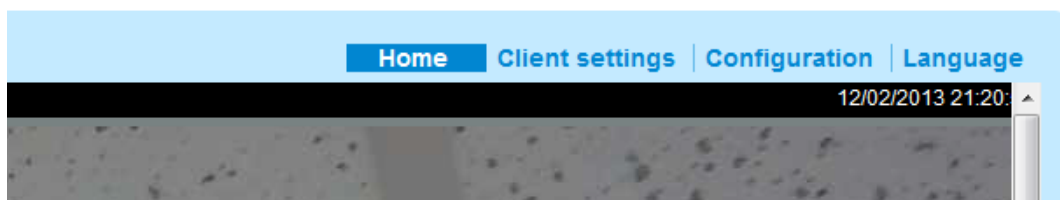

Next Click the Applications drop down.

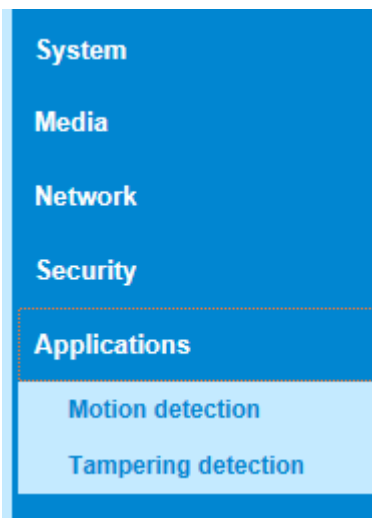


Now select motion detection.

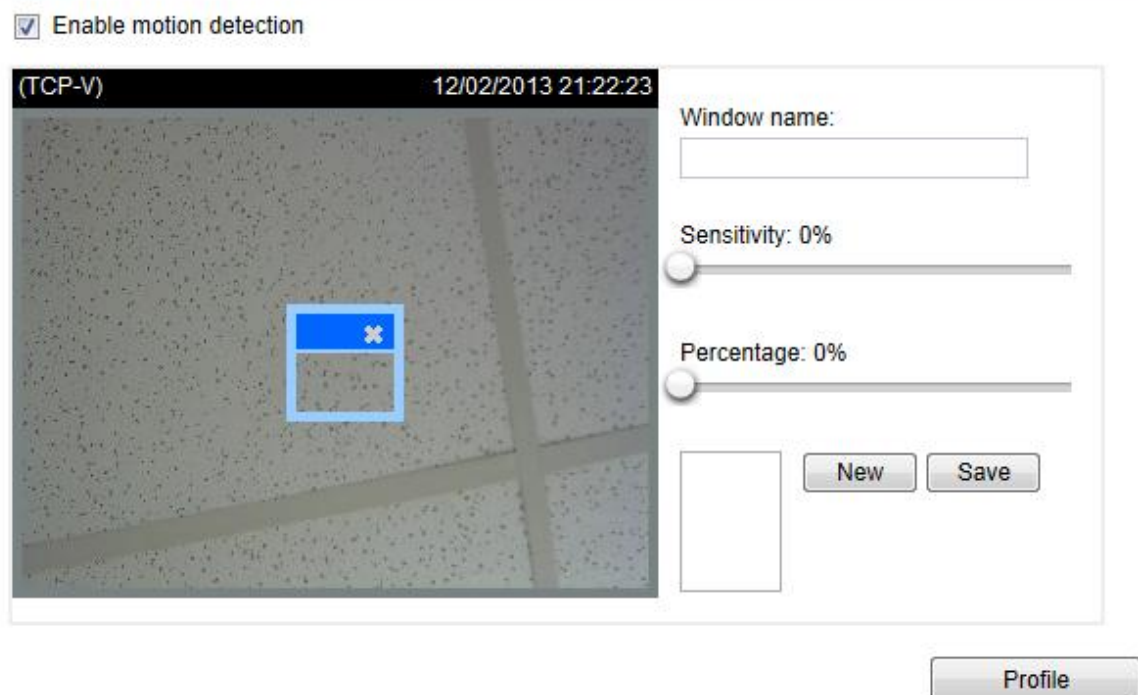

As you can see the box will not move at all.

To fix this click tools at the top of the page (IE tools, not Vivotek tools.)

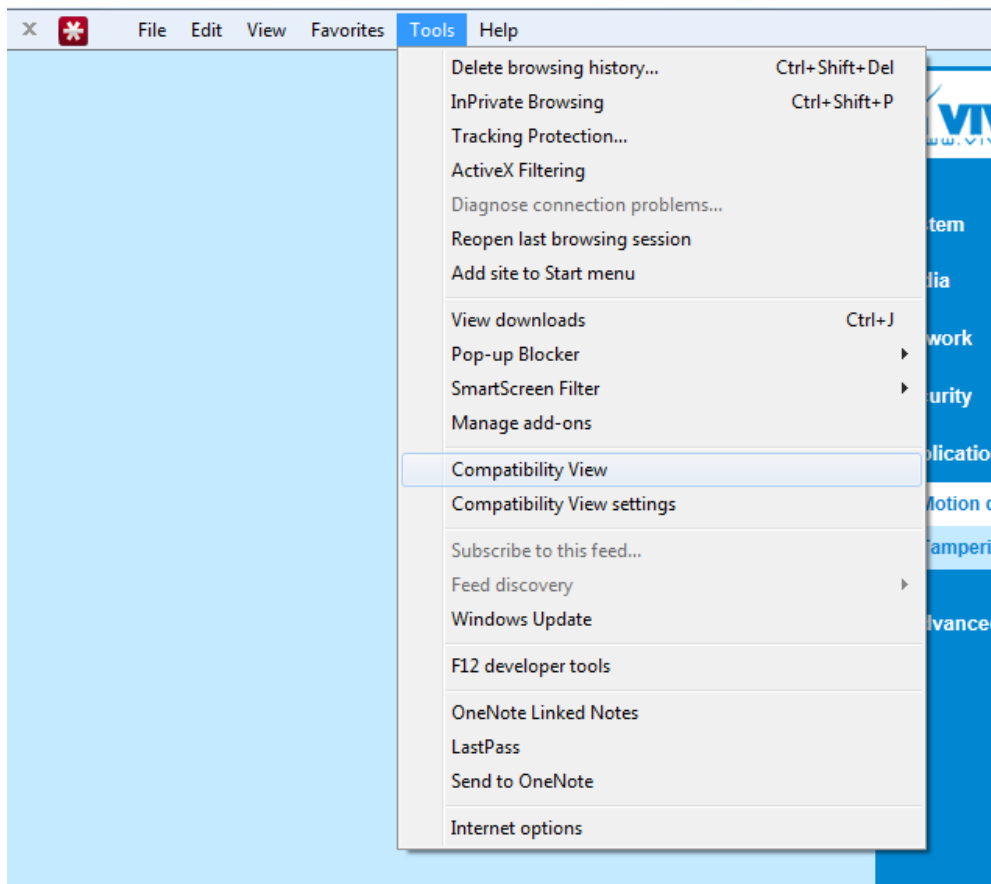

Now click 'compatibility view. By checking this box will allow you to move around and resize your motion detection box.

